

Twist-Lock System

Wand employs a slide-and-twist mechanism.

UNLOCKED: Dots and channel align (left). **LOCKED:** Dots and channel offset (right).



CAUTION

Use care when pulling and twisting the extension wand.

Excessive force will damage the wand.

To extend, hold wand as shown, pull wand head away from handle and carefully twist wand head counter-clockwise to lock.

To retract, hold wand as shown, carefully twist wand head clockwise, and push wand head toward handle.



Extension Wand Components

Spare retention strap, lock nut, and rubber washer are supplied in case of loss.

- A) Extension Wand With Bracket
- B) Lock Nut
- C) Rubber Washer (2)
- D) Wrench
- E) Retention Strap (2)

Note: Retention strap will be damaged by contact with Aprehend.

Spare and replacement parts are available from ConidioTec and authorized suppliers. Contact ConidioTec directly if you experience any problems with this equipment.



ConidioTec

Natural Urban Pest Control

www.aprehend.com
800.891.8610

Doc.# 40-100-61521

Extension Wand Instructions



Extension Wand Assembly and Use

Reference the brief video at www.aprehend.com/training for helpful information on assembly and use.


Important: Before attaching the extension, ensure the sprayer bottle is empty and the battery is in *off* position. When using the extension wand, the battery or compressor *on/off* switch should be used to activate the sprayer.



1
Insert both loops of the retention strap over the spray gun handle.



2
Connect the extension wand to the spray gun as pictured above by following illustrated directions to the right.

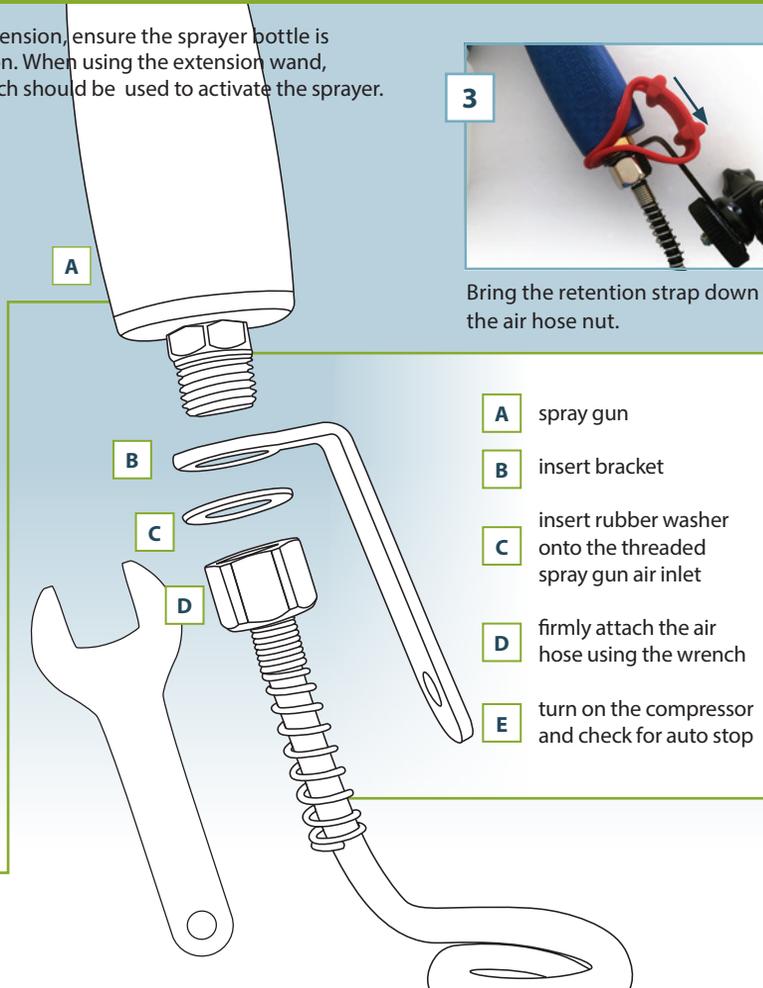


3
Bring the retention strap down to the air hose nut.



4
Pull the flat part of the retention strap up and over the trigger to keep the trigger fully depressed.




5
Use the battery or compressor on/off switch to start and finish the spray application.

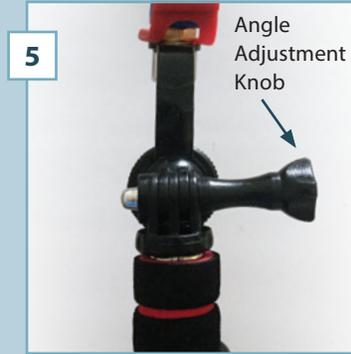

6
Fill spray gun bottle with Aprehend[®] and set the spray gun to the desired angle for baseboard or ceiling application.



7
When extension wand is not needed, the retention strap can be removed from the trigger and the spray gun used normally.

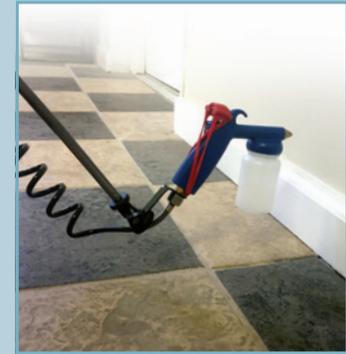

Baseboard Application



Ceiling Application